 
## **Hanging Desk Cubby**














**x1** MARKER BOARD

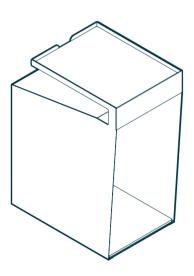



HANGING DESK CUBBY **x1** 

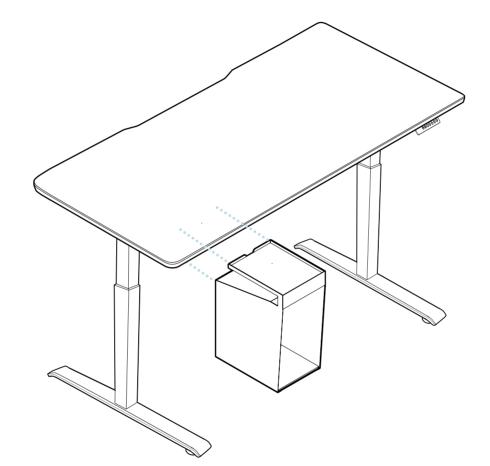

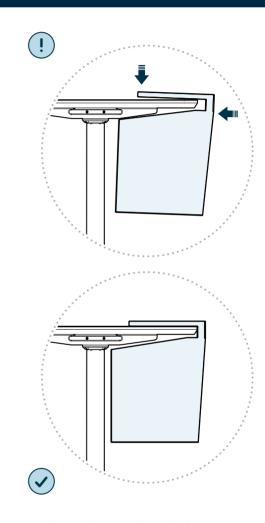

Remove the Hanging Desk Cubby from the box, and slide the top tray over the edge of the desk. Ensure that the Hanging Desk Cubby is flush to the desk's edge and level with the desk's top. Flip the Marker Board, which ships face-down, over before use.

WARNING: Empty product weighs 15 lb. When adding it to your desk set up, do not exceed the desk weight limit.

- Essential Electric Standing Desk 150 lb (68 kg)
- Electric Standing Desk 72x30 180 lb (81.6 kg)

• Electric Standing Desk 60x30 - 200 lb (90.7 kg)



